

# FIRST USE? CALIBRATE EMPTY. FILL. CALIBRATE FULL. DONE.

Before the first fill, perform an Empty Calibration. After filling to the maximum fill level, wait 1 minute for the propane to settle, then perform a Full Calibration for optimized accuracy.



TO START OPEN OR  
DOWNLOAD ROTAREX  
CONNECT APP



 **Rotarex Connect App**  
available on App Store and Google Play









Two quick steps  
before and after  
the first fill



Takes just a few  
seconds



No technical skills  
required

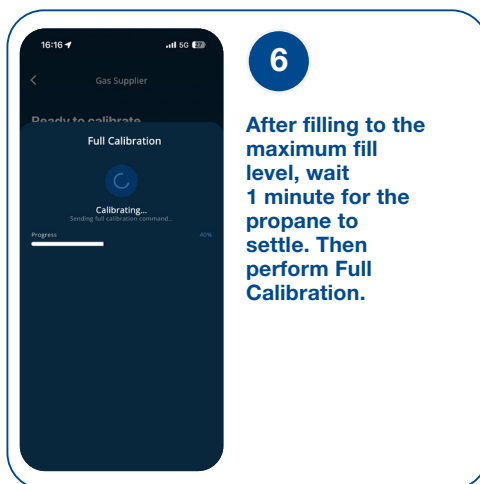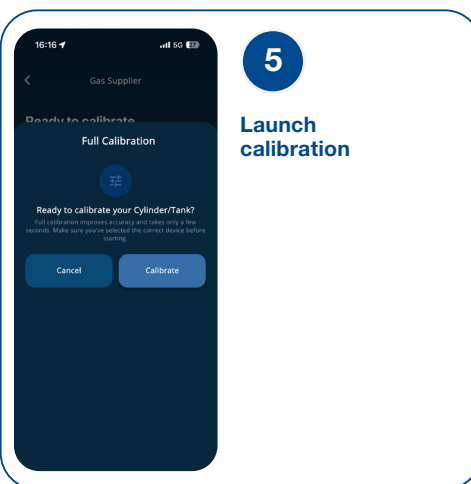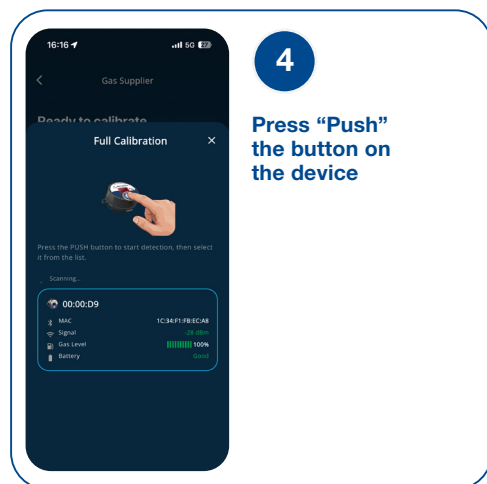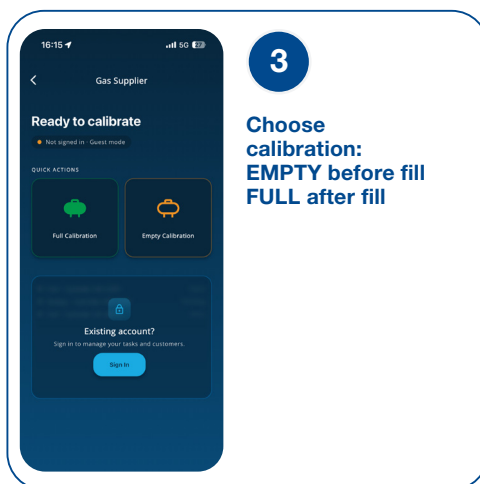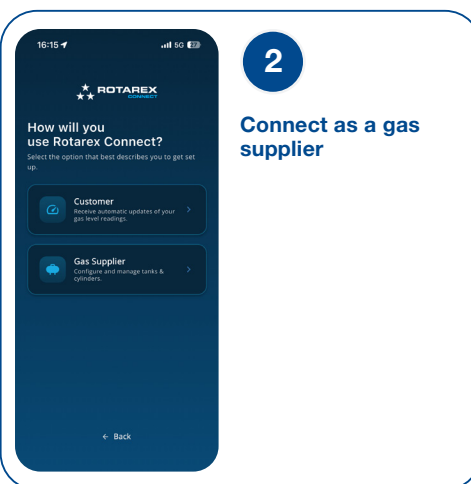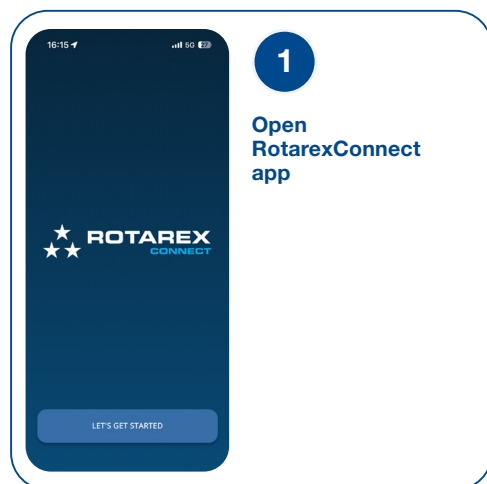

## IMPORTANT

1. BEFORE FIRST FILL: Empty Calibration with the tank completely empty.
2. AFTER FIRST FILL: Fill to the maximum fill level, wait 1 minute for the propane to settle, then perform Full Calibration.



Both calibration steps are part of the initial setup and normally only need to be performed once. For either calibration, follow the same app process and select the appropriate calibration type.



ROTAREX NORTH AMERICA  
4 Middlebury Boulevard  
Randolph, NJ 07869 - USA



Tel. 724 696 4340



northamericacustomer.  
service@rotarex.com



WWW.ROTAREX.COM